



BED ASSEMBLY INSTRUCTION SHEET

BAG INCLUDES:


- 4 x Threaded Rods
- 4 x Nuts
- 4 x Half Moon washers
- 4 x Caps
- 1 x Spanner
- 6 x Screws (Solid Slats)

Step 1



Screw threaded rod into centre hole, which contains threaded barrel nut.

Step 2

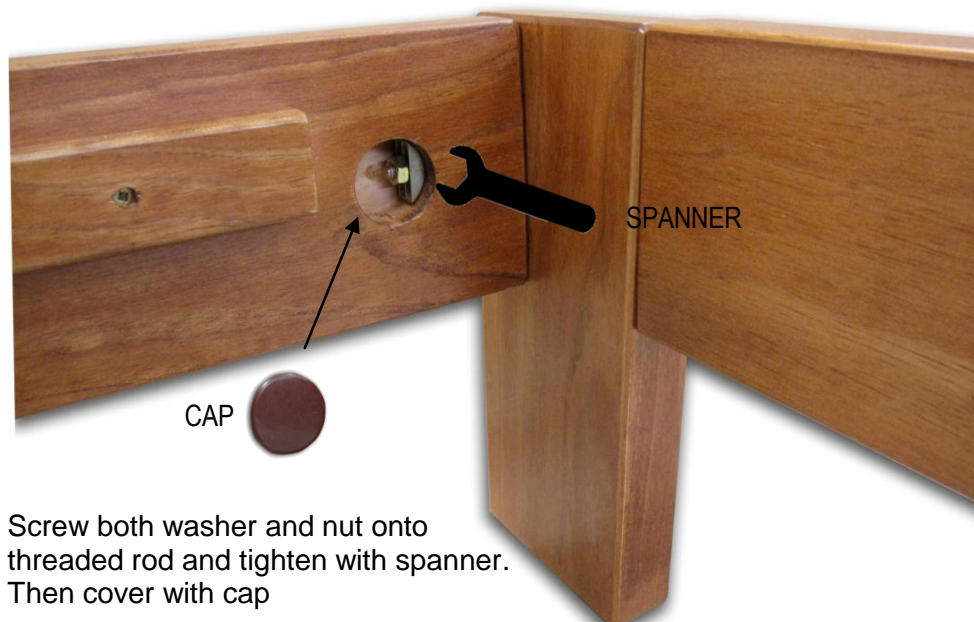

Screw both washer and nut onto threaded rod and tighten with spanner. Then cover with cap

Once bed has been assembled, spread the solid slats along the base (webbing facing downwards) and secure them to the frame using 6 x screws provided.

TOUCHWOOD PRODUCTIONS LTD

74 Main Road, Tawa, Wellington, New Zealand

Phone: +64 4 232 2275 Fax: +61 4 232 2276

Email: info@touchwoodcots.co.nz Website: www.touchwoodfurniture.co.nz