




TRUNDLER BED INSTRUCTIONS

Diagram **A**

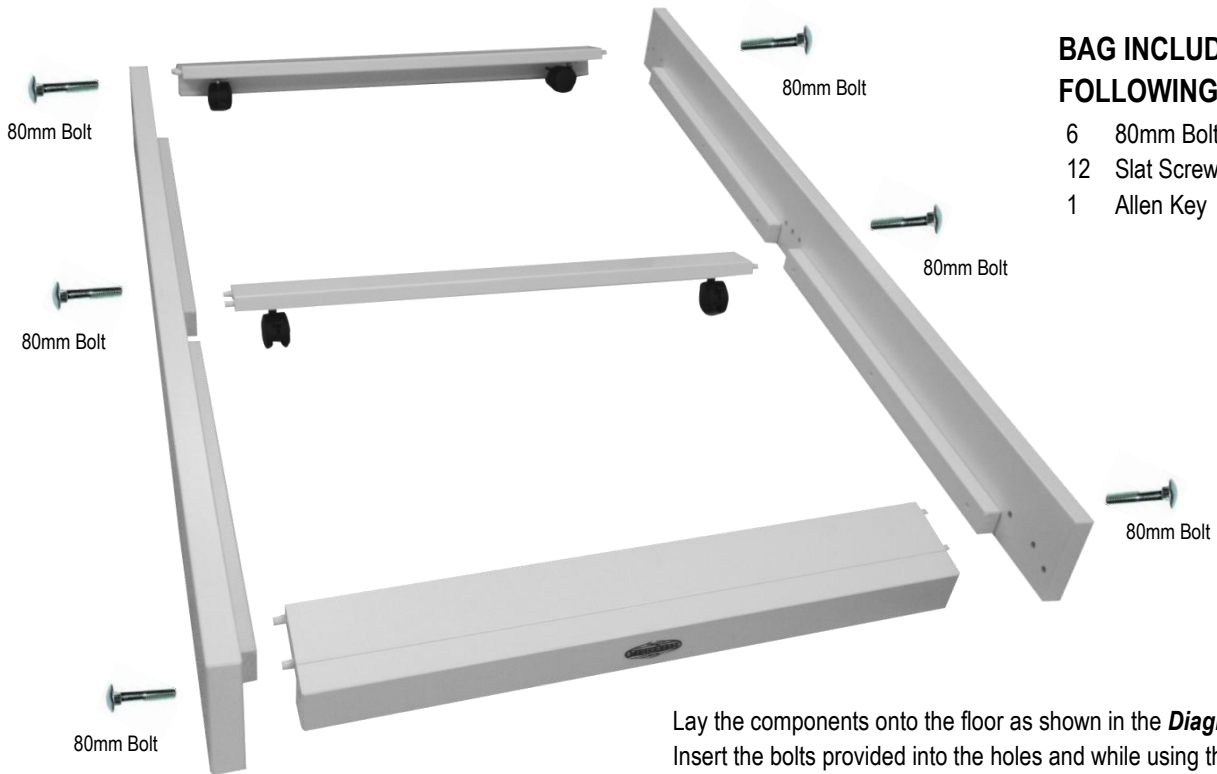


BAG INCLUDES THE FOLLOWING:

- 6 80mm Bolts
- 12 Slat Screws
- 1 Allen Key

Lay the components onto the floor as shown in the **Diagram A**. Insert the bolts provided into the holes and while using the Allen key, tighten the bolts on one side and repeat this stage again on the other side.

Diagram **B**

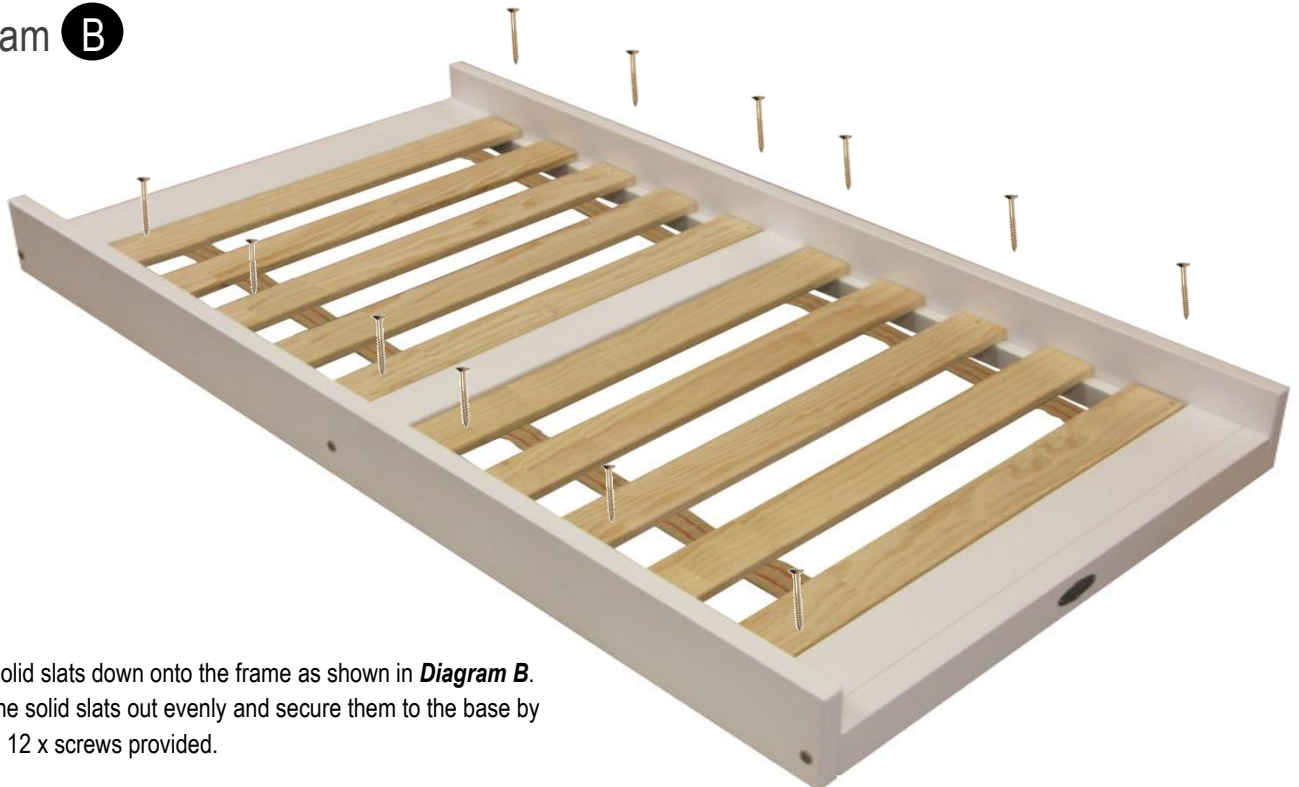

Lay the solid slats down onto the frame as shown in **Diagram B**. Spread the solid slats out evenly and secure them to the base by using the 12 x screws provided.