




## TUSCANY COT ASSEMBLY INSTRUCTIONS

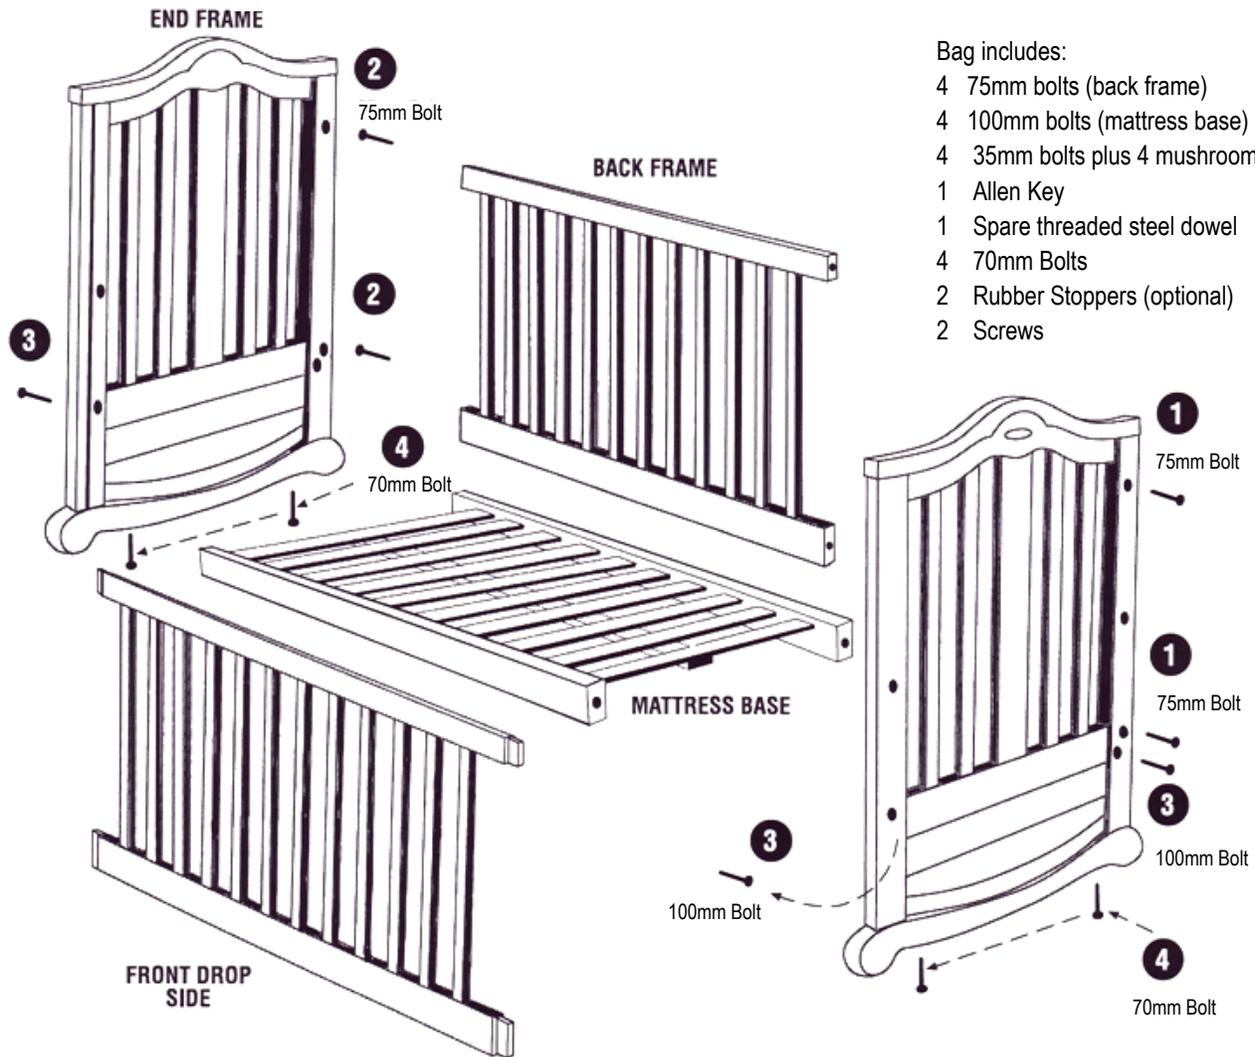

### ASSEMBLY INSTRUCTIONS – Please read carefully prior to assembly

You are now the proud owner of a Touchwood Safety Cot. This cot has been waxed with a non-toxic furniture wax prior to being packaged. We advise that you wipe any excess wax from your cot prior to assembly.

**IMPORTANT NOTE:** In the unlikely event of a bolt not winding easily, a minor adjustment to the alignment of the threaded steel dowel that accepts the bolt may be made with a standard screwdriver.

**Failure to follow the Assembly Instructions may cause damage to your cot.**

1. Take one end frame and the back frame and bolt together using two of the 75mm bolts supplied (use Allen key supplied)
2. Take second end frame and bolt to other end of back frame using two 75mm bolts supplied.
3. Lay the cot on its back frame. Insert mattress base to the required level. Fix with 4 x 100mm bolts (leaving the bolts adjacent to the drop side not fully tightened)
4. Carefully slide in the Dropside ensuring the **Touchwood Emblem is facing upwards** – keep the Dropside level and parallel as you are inserting it.
5. Attach the bottom foot with the 4 x 70mm bolts and tighten.
6. Stand cot up and fully tighten all bolts.
7. Insert the 4 x 35mm bolts and mushroom caps into the holes that are not being used for the different mattress base levels.

**SAFETY NOTE:** this step is essential in order to eliminate a finger entrapment hazard.

8. Optional rubber stoppers to be inserted in the bottom of each Dropside Groove (2 screws provided)

**For optional Drawer:** This can be fitted into position after the above has been completed.